

IBM				NetApp
N-Series	Model	Operations Manager Tiers	Type	Type
N3300	A10	1	2859	FAS2020
	A20	1		FAS2020C
N3600	A10	2	2862	FAS2050
	A20	2		FAS2050C
N5200	A10	3	2864	FAS3020
	A20	3		FAS3020C
	G10	3		V3020
	G20	3		V3020C
N5300	A10	5	2869	FAS3040
	A20	4		FAS3040C
	G10	5		V3040
	G20	4		V3040C
N5600	A10	6	2868	FAS3070
	A20	5		FAS3070C
	G10	6		V3070
	G20	5		V3070C
N6040	A10	4	2858	FAS3140
	A20	4		FAS3140C
N6060	A12	5	2858	FAS3160
	A22	5		FAS3160C
N6070	A11	5	2858	FAS3170
	A21	5		FAS3170C
N7700	A21	6	2866	FAS6040C
	G21	6		V6040C
N7900	A21	7	2867	FAS6080C
	G21	7		V6080C

Operatins Manager Licence How to use:
For example, to use OMC to manage one N3600 Model A20, five N6040 Model A10s, and two N7900 Model G21s, you would order two of Tier2, five of Tier4, and four of Tier7.